

MMD 24B3HA2, 27B3HA2 Mechanical Instructions

1.1. Suggest Tools

Here are some tools that can be used for the LCD monitor's service and repair.

Philips-head Screwdriver

Use a Philips-head screwdriver to fasten/remove the K- or B-typed screws



P/N : N/A

Gloves

To protect LCD Panel and your hand



P/N: (L) N/A (M) N/A

C/D Disassembly Tool

Use C/D Disassembly Tool to open cosmetic cover and avoid scratch.



P/N: N/A

Spacer Screwdriver

Use a spacer screwdriver to fasten/remove spacer screws or hex screws.




P/N: N/A

Tape:




During the disassembly process, the local service center will provide new tapes for replacement if necessary.



1.2 Disassembly Procedure

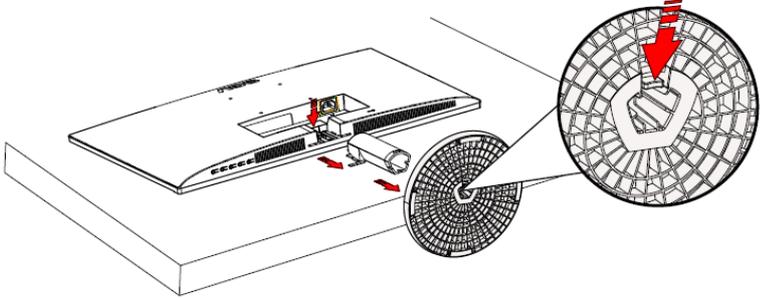Step	Figure	Description
Remove base and stand		<ul style="list-style-type: none">● Push the base downward● Press the release button to detach the stand.

Remove rear cover

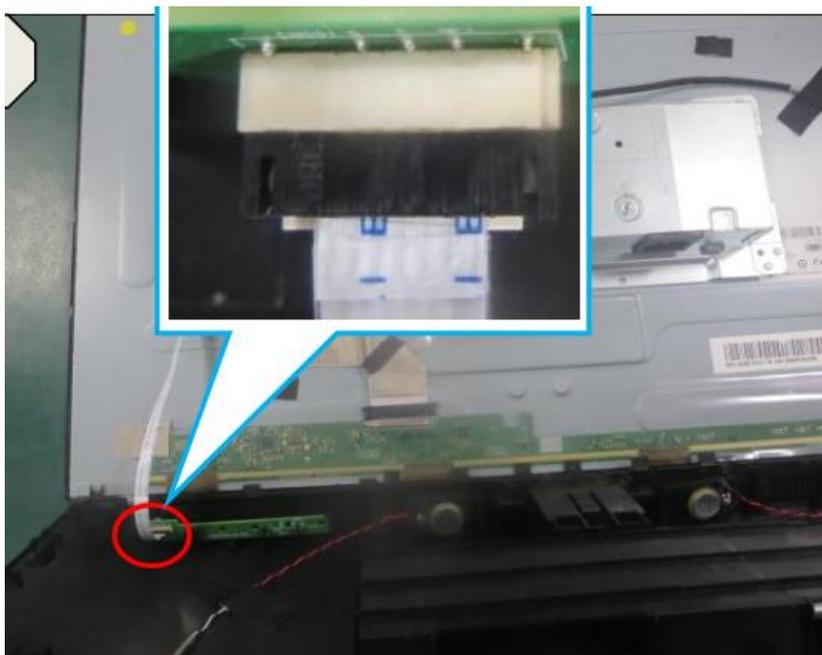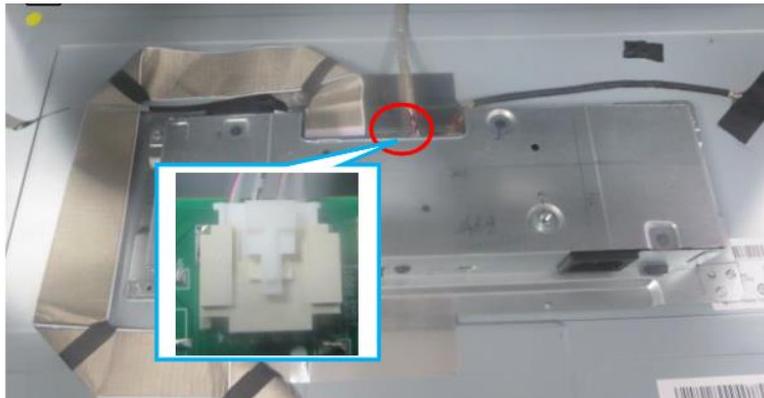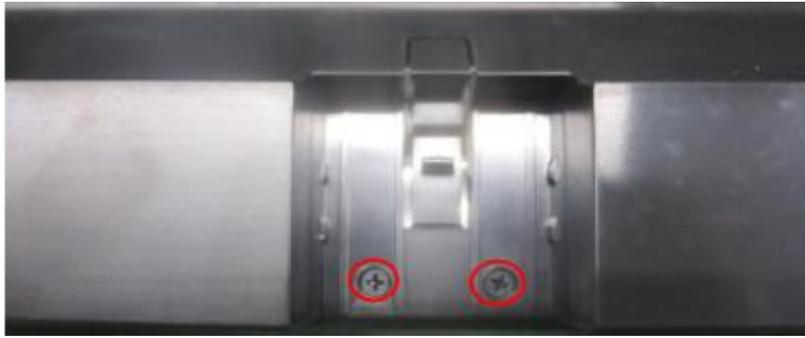


- Release screws.
- Use the tool to disassemble the rear cover.
- Disconnect cables between panel and cover.

Remove deco





- Release screws to remove deco.

Remove main frame

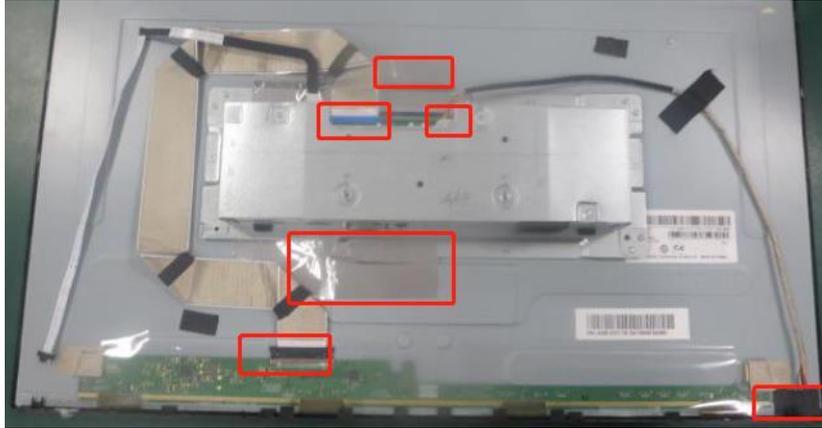


- Tear out tapes
- Disconnect all the cables.


Remove board from main frame

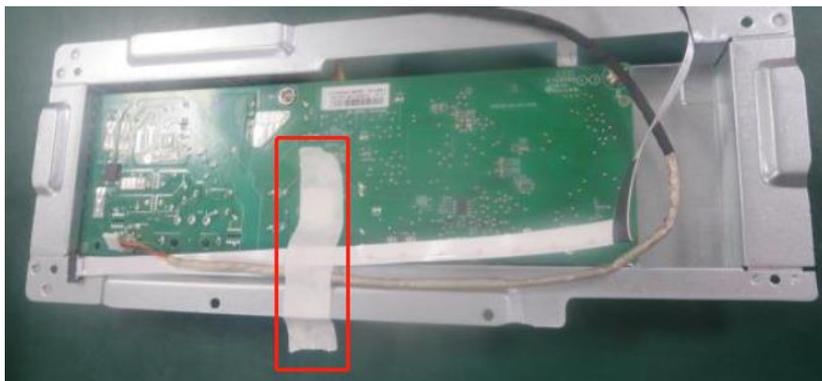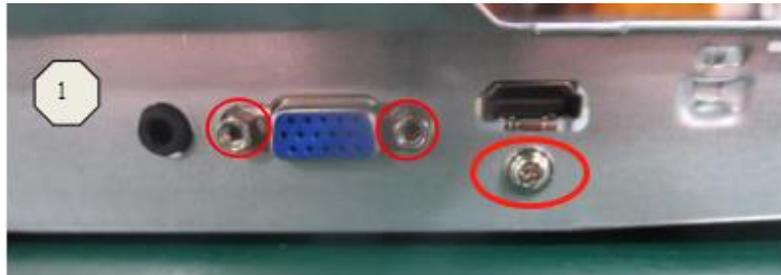

- Remove tapes
- Release screws.

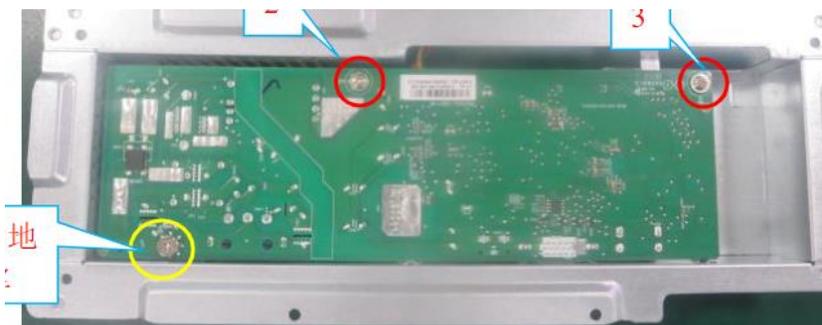

**Remove speakers
and key board**

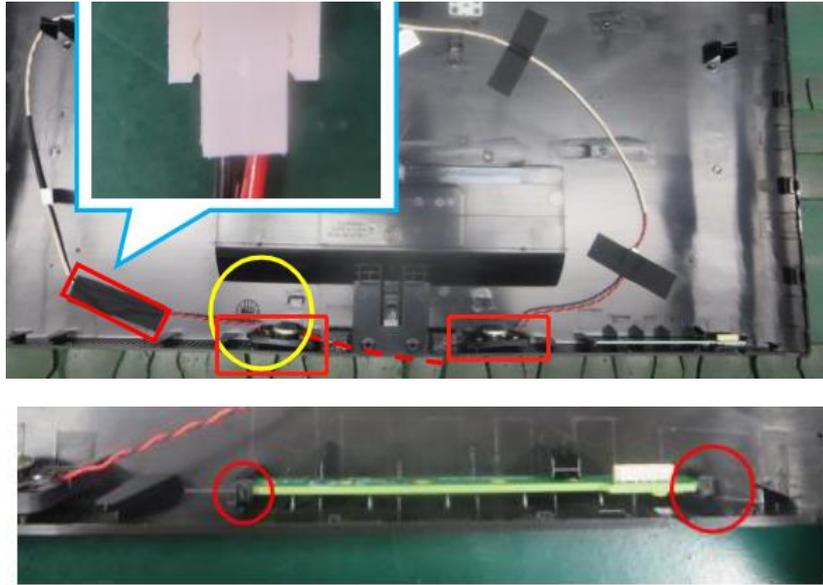

- Remove speakers
- Disconnect cable and take out key board